



Pressure/torque conversion chart Tool model: MXTP-5

PRESSURE		TORQUE		PRESSURE
PSI	FT. LBS.	NM		BAR
1500	812	1101		104
1600	867	1175		110
1800	977	1324		124
2000	1087	1474		138
2200	1198	1623		152
2400	1308	1773		165
2600	1419	1923		179
2800	1529	2073		193
3000	1640	2223		207
3200	1751	2373		220
3400	1861	2523		234
3600	1972	2673		248
3800	2082	2823		262
4000	2193	2973		276
4200	2304	3123		290
4400	2415	3273		303
4600	2525	3423		317
4800	2636	3574		331
5000	2747	3724		345
5200	2857	3873		358
5400	2967	4023		372
5600	3078	4172		386
5800	3188	4321		400
6000	3298	4471		414
6200	3408	4619		427
6400	3517	4768		441
6600	3627	4916		455
6800	3736	5065		468
7000	3846	5214		482
7200	3953	5359		496
7400	4061	5505		510
7600	4168	5650		524
7800	4276	5796		538
8000	4383	5942		552
8200	4489	6085		565
8400	4594	6228		579
8600	4700	6371		593
8800	4805	6514		607
9000	4911	6657		620
9200	5013	6796		634
9400	5115	6934		648
9600	5218	7073		662
9800	5320	7212		676
10000	5422	7350		690

rev. 3/15/2021